


## 1. Warnings



1. Read the user's manual thoroughly.
2. Use protective gloves.
3. Have safety shoes on.
4. Use protective goggles.

## 2. Structure of the jack

1. Relief valve
2. Base
3. O-ring
4. Hydraulic cylinder
5. Piston
6. Oil
7. Oil reservoir
8. Extension screw
9. Top cover
10. Pump piston
11. Pump casing
12. O-ring

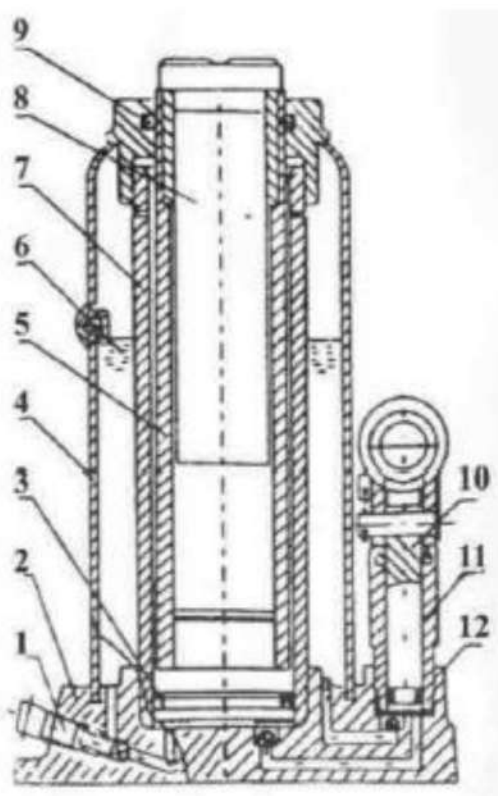

## 3. Technical data

Model	Capacity	Min. height	Max. height	Weight
LS-110	2 000 kg	148 mm	278 mm	2,3 kg
LS-140	10 000 kg	200 mm	385 mm	5,2 kg
LS-160	20 000 kg	235 mm	440 mm	9,8 kg

## 4. Product description

This jack has been designed for lifting heavy goods. It must not be used for other purposes. It must not be used as a fixed supporting element. Before using the jack, check the weight of the goods. If it exceeds the maximum capacity, stop working. Also, it is forbidden to use the lift for purposes different than described in the manual.

## 5. Safety precautions

For your own safety, make sure to read through, understand and abide by the information outlined in this instruction manual. Get to know the parts of the jack and stay aware of the dangers related to using it. Plus to that, adhere to the basic work safety regulations.

In case you notice any abnormalities in the jack's operation, report to your supervisor, contact the seller or the local authorised workshop. If you use non-genuine spare parts, the warranty will be void.

**The supplier cannot be held liable for any damage or injury caused by incorrect use (not in line with this manual) of the device.**

1. Any improper use of the jack is strictly forbidden.